

Document Title: ATMOS 22 Manual Pages		Part # 18219
		Release Date: 11.15.2017
Rev	Description	Revision By
00	Created File	LAJ
01	Updated Specifications	LAJ
02	Add wind spike information	AS
03	Edited according to DCO 02673	CSC
04	Edited per https://app.asana.com/0/747632066803417/1141684913416158	CSC
05	Updated specs per https://app.asana.com/0/747632066803417/1174729869988097	CSC
		Date
		11.15.2017
		1.6.2018
		1.16.2019
		8.9.2019
		1.31.2020
		7.31.2020

Web filename: http://publications.metergroup.com/Manuals/18219_ATMOS22_Pages.pdf

Working Filename:

/Volumes/GoogleDrive/Team Drives/Product Number Library/18200-18299/18219

Dimensions: 12.5" wide x 8" tall (folded, 8"H x 6.25"W)

Colors: CMYK/Full color 4/4

Printer: electronic only

Material: Tabloid (11x17) Color Copy Digital

Finishing: Electronic Only

Image below is for reference only. Not to scale.

TABLE OF CONTENTS

1. Introduction.....	1
2. Operation	2
2.1 Installation	2
2.2 Connecting.....	3
2.2.1 Connect to METER Data Logger.....	4
2.2.2 Connect to Non-METER Logger.....	4
2.3 Communication	6
3. System.....	7
3.1 Specifications.....	7
3.2 Anemometer	10
3.3 Temperature Sensor.....	11
3.4 Tilt Sensor.....	11
3.5 Wind Speed and Direction Theory	12
3.6 Limitations	13
3.6.1 Snow and Ice Accumulation	13
3.6.2 Heavy Rain and Strong Wind	14
3.7 Measurements with METER Data Loggers	14
4. Service.....	15
4.1 Calibration.....	15
4.2 Cleaning and Maintenance.....	15
4.3 Troubleshooting.....	16